

PB410_NEU Manual

Charging instructions **GB**

- Connect GP PowerBank directly to a power source. Never use extension cords.
- Charge only GP NiMH batteries in GP PowerBank. Both AA and AAA size batteries can be charged at the same time.
- Insert GP NiMH batteries into GP PowerBank according to the battery polarity. Avoid reverse charging.
- The amber LED indicators will be on during charging. When the charger is unplugged or the batteries are removed, the indicators will be off.

Instruction Manual

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

Charging Time

GP NiMH	Size	NiMH Battery (Capacity)		Charging Time (hrs)
		2100 series (min. 2000 mAh)	2700 series (min. 2600 mAh)	
AA	1300 series (min. 1300 mAh)	1800 series (min. 1800 mAh)		13 - 16
		1900 series (min. 1900 mAh)		9 - 11.5
AAA	650 mAh (min. 650 mAh)	1000 series (min. 950 mAh)		4 - 6.5

Specifications

Version	UL Plug	GS Plug	BS Plug
Input voltage	120V AC	230V AC	230V AC
Output voltage	1.4V		
Charging current	180mA (AA/AAA)		

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection systems. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

Lādēšanas instrukcijas **LV**

- Pieslēdziet GP PowerBank tieši pie strāvas avota. Nekad neizmantojiet pagarinājuma vadu.
- Lādēt GP PowerBank lādētājī tikai ar GP NiMH elementiem. AA vai AAA izmēra elementus var lādēt vienlaicīgi.
- GP NiMH elementus GP PowerBank ievietojiet lādētājī elementu polaritātē. Izvairieties no reverslādēšanas.
- Uzlaides laikā degs dzeltenas LED indikatorus. Izslēdzot lādētāju vai izņemot elementus, indikatorus nodzīs.

Instruções de Carregamento **P**

- Conecte o GP PowerBank diretamente à alimentação. Nunca utilize extensões.
- Carregue apenas baterias GP NiMH no GP PowerBank. Podem ser carregadas em lādētājī vienlaicīgi.
- Insere as baterias GP NiMH no GP PowerBank de acordo com a polaridade da bateria. Evite desconectar a bateria.
- O indicador LED ambar estará ligado durante o período de carga. Quando o carregador for desligado ou as baterias retiradas o indicador apagará.

Instrukcja ładowania **PL**

- Podłącz ładowarkę GP PowerBank bezpośrednio do gniazda zasilającego. Nie należy używać przedłużaczy.
- Ladovat GP PowerBank iba v zásuvce. Nepoužívajte predlžovacie káble.
- Insere as baterias GP NiMH no GP PowerBank de acordo com a polaridade da bateria. Evite desconectar a bateria.
- O indicador LED ambar estará ligado durante o período de carga. Quando o carregador for desligado ou as baterias retiradas o indicador apagará.

Instrucciones de carga **E**

- Conecte el GP PowerBank directamente a la corriente. Nunca utilice alargadores de cable.
- Cargue solamente baterías NiMH GP en el GP PowerBank. Puede cargar baterías AA y AAA simultáneamente.
- Insere as baterias GP NiMH no GP PowerBank de acordo com a polaridade indicada. Evite la inserción de baterías GP NiMH en el GP PowerBank de acuerdo con la polaridad indicada. Evite la inserción de baterías GP NiMH en el GP PowerBank de acuerdo con la polaridad indicada. Evite la inserción de baterías GP NiMH en el GP PowerBank de acuerdo con la polaridad indicada. Evite la inserción de baterías GP NiMH en el GP PowerBank de acuerdo con la polaridad indicada.
- Los LEDs rojos permanecerán encendidos durante la carga. Cuando desconecte el cargador o retire las baterías, los indicadores se apagarán.

دولدورما تالماتيان **AZ**

- GP PowerBank qurğusunu birbaşa enerji mənbəyinə qoşun. Heç vaxt uzadıcı kabelərlən istifadə etməyin.
- Yalnız GP NiMH (Nikel Metal Hidrit) batareyalarını GP PowerBank qurğusunda doldurun.
- Insere as baterias GP NiMH no GP PowerBank de acordo com a polaridade da bateria. Evite desconectar a bateria.
- O indicador LED ambar estará ligado durante o período de carga. Quando o carregador for desligado ou as baterias retiradas o indicador apagará.

Adi GP NiMH akkumulyator batareyalarını doldurmaq üçün **NiMH**

- Batareyaları ən effektiv maksimum sayıya qədər üçdən yeni batareyaların 2-3 dəfə doldurulub-başladılması vacibdir.
- Əgər batareyalar bir həftədən çox istifadəsiz qalıbsa, onları istifadə etməzdən əvvəl doldurun.
- Yalnız GP NiMH (Nikel Metal Hidrit) batareyalarını GP PowerBank qurğusunda doldurun.
- Insere as baterias GP NiMH no GP PowerBank de acordo com a polaridade da bateria. Evite desconectar a bateria.
- O indicador LED ambar estará ligado durante o período de carga. Quando o carregador for desligado ou as baterias retiradas o indicador apagará.

Yeni nesil NiMH akkumulyator batareyalarını doldurmaq üçün **NiMH**

- Yeni nesil GP NiMH akkumulyator batareyalarını doldurmaq üçün GP PowerBank qurğusuna birbaşa enerji mənbəyinə qoşun. Heç vaxt uzadıcı kabelərlən istifadə etməyin.
- Yalnız GP NiMH (Nikel Metal Hidrit) batareyalarını GP PowerBank qurğusunda doldurun.
- Insere as baterias GP NiMH no GP PowerBank de acordo com a polaridade da bateria. Evite desconectar a bateria.
- O indicador LED ambar estará ligado durante o período de carga. Quando o carregador for desligado ou as baterias retiradas o indicador apagará.

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

دولدورما تالماتيان **AZ**

- GP PowerBank qurğusunu birbaşa enerji mənbəyinə qoşun. Heç vaxt uzadıcı kabelərlən istifadə etməyin.
- Yalnız GP NiMH (Nikel Metal Hidrit) batareyalarını GP PowerBank qurğusunda doldurun.
- Insere as baterias GP NiMH no GP PowerBank de acordo com a polaridade da bateria. Evite desconectar a bateria.
- O indicador LED ambar estará ligado durante o período de carga. Quando o carregador for desligado ou as baterias retiradas o indicador apagará.

Adi GP NiMH akkumulyator batareyalarını doldurmaq üçün **NiMH**

- Batareyaları ən effektiv maksimum sayıya qədər üçdən yeni batareyaların 2-3 dəfə doldurulub-başladılması vacibdir.
- Əgər batareyalar bir həftədən çox istifadəsiz qalıbsa, onları istifadə etməzdən əvvəl doldurun.
- Yalnız GP NiMH (Nikel Metal Hidrit) batareyalarını GP PowerBank qurğusunda doldurun.
- Insere as baterias GP NiMH no GP PowerBank de acordo com a polaridade da bateria. Evite desconectar a bateria.
- O indicador LED ambar estará ligado durante o período de carga. Quando o carregador for desligado ou as baterias retiradas o indicador apagará.

Yeni nesil NiMH akkumulyator batareyalarını doldurmaq üçün **NiMH**

- Yeni nesil GP NiMH akkumulyator batareyalarını doldurmaq üçün GP PowerBank qurğusuna birbaşa enerji mənbəyinə qoşun. Heç vaxt uzadıcı kabelərlən istifadə etməyin.
- Yalnız GP NiMH (Nikel Metal Hidrit) batareyalarını GP PowerBank qurğusunda doldurun.
- Insere as baterias GP NiMH no GP PowerBank de acordo com a polaridade da bateria. Evite desconectar a bateria.
- O indicador LED ambar estará ligado durante o período de carga. Quando o carregador for desligado ou as baterias retiradas o indicador apagará.

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

Importance

- GP PowerBank is designed for indoor use only. Do not expose it to rain or snow.
- Charge only NiMH type rechargeable batteries. Other types of batteries may burst causing personal injury or damage.
- Do not mix different types of batteries (eg. NiMH, alkaline, etc) in the electrical device.
- Remove batteries from the electrical device if the device is not going to be used for a long time.
- Do not incinerate, disassemble or short circuit batteries.
- If the performance of the batteries decrease substantially, it is time to replace the batteries.
- This direct plug-in power unit shall be correctly orientated in a vertical or floor mount position.
- Charging temperature: 0-40°C; Battery storage temperature: -20-35°C.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.

הוראות הטענה **HB**

- Brancher le PowerBank GP directement à une prise. Ne pas utiliser de rallonge.
- Charger seulement des accus GP NiMH. Des accus AA et AAA peuvent être chargés simultanément.
- Insérer les accus GP NiMH dans le PowerBank GP en respectant les polarités. Eviter les inversions de polarité.
- Les LEDs s'allument pour indiquer la charge. Les LEDs s'éteignent quand le chargeur est débranché ou quand les accus sont retirés.